



A Generic Sauna Room Assembly Manual








Version: 1.3


Parts List Exterior

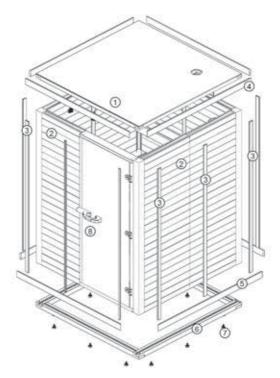



- 1. Ceiling Assembly
- 2. Wall Elements
- 3. Exterior Mouldings
- 4. Top Exterior Mouldings
- 5. Bottom Exterior Mouldings
- 6. Main Base Frame
- 7. ABS Bolt Leveler
- 8. Door Set

Parts List Interior

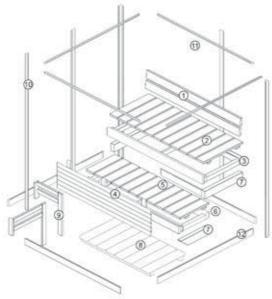




- Back Rest
- 2. Top Bench Cover
- 3. Top Bench Frame
- 4. Bench Siding
- 5. Lower Bench Cover
- 6. Lower Bench Frame
- 7. Bench Supports
- 8. Flooring
- Collapsible heater guard
- 10. Internal Mouldings


- Internal Top Mouldings
- 12. Internal Bottom Horizontal Mouldings

Parts List Interior (L-type Bench)

*For Larger Sauna Room

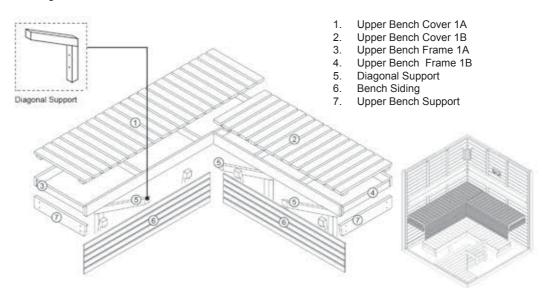


(L-type Lower Bench)

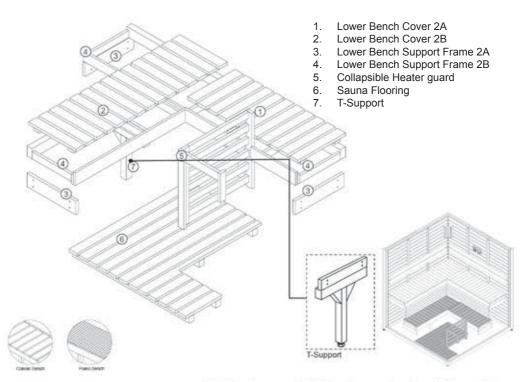

Parts List Interior (Wave-type Bench)

*For room with wave design benches

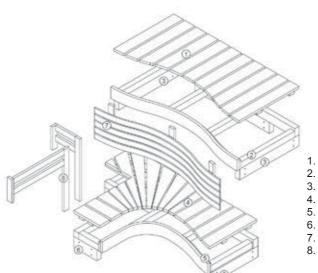




- 1. Upper Bench Cover
- 2. Upper Bench Frame
- 3. Upper Bench Support
- 4. Lower Bench Cover
- 5. Lower Bench Frame6. Lower Bench Support
- Bench Siding
- Collapsible heater guard

Parts List Interior (L-type Wave Bench)


*For room with larger wave design benches

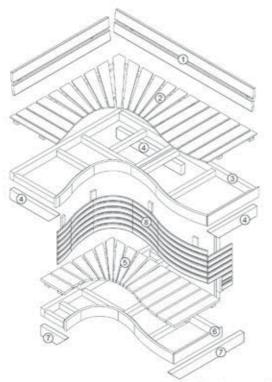




- 1. Back Rest
- 2. Upper Bench Cover
- 3. Upper Bench Frame
- 4. Upper Bench Support
- 5. Lower Bench Cover
- 6. Lower Bench Frame
- 7. Lower Bench Support
- 8. Bench Siding

Screws for Room Exterior

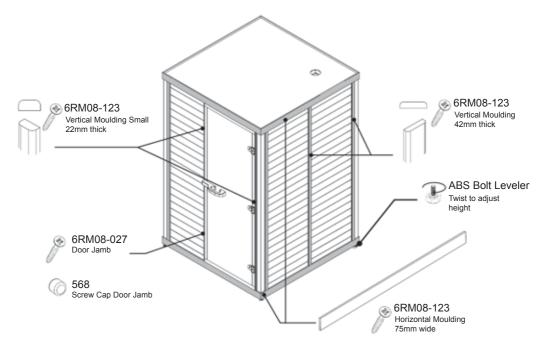


Screws for Room Interior

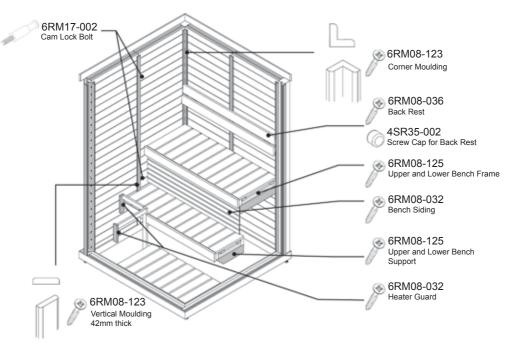


Wall Assembly

Ol Connect base frames according to their corresponding numbers.

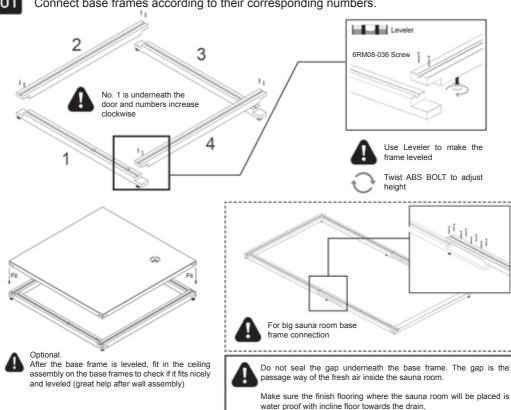


02 Insert Cam Lock Bolts on Wall Panels.

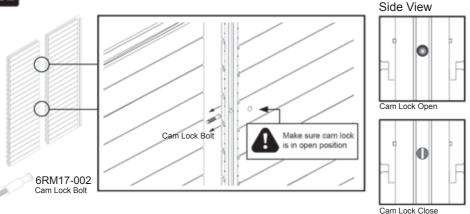


Wall Assembly

Attach wall panels according to their label. Take note of the grooves direction (arrow direction).

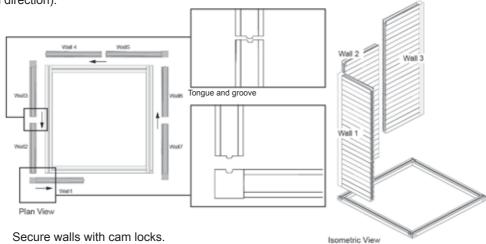


Secure walls with cam locks.

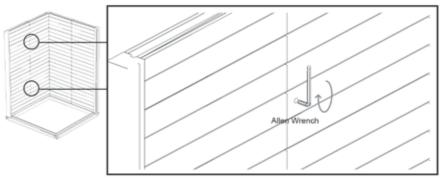


Before moving on to securing the next wall element, make sure that both cam locks are properly secured


Secure Door Jamb with screws then cover with screw caps.

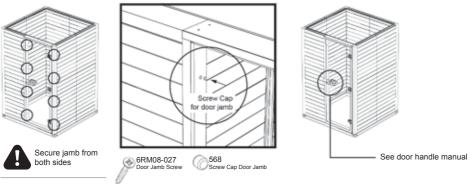


Ceiling Assembly

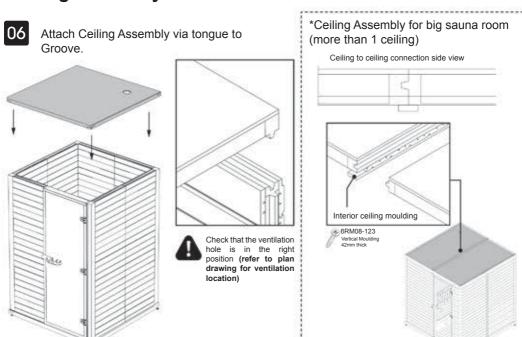

O7 Attach all mouldings (external, internal, top and bottom).

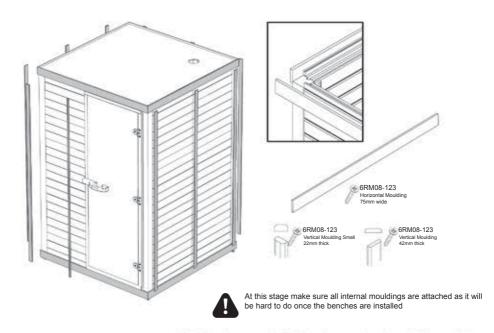


Interior Furnishes Assembly

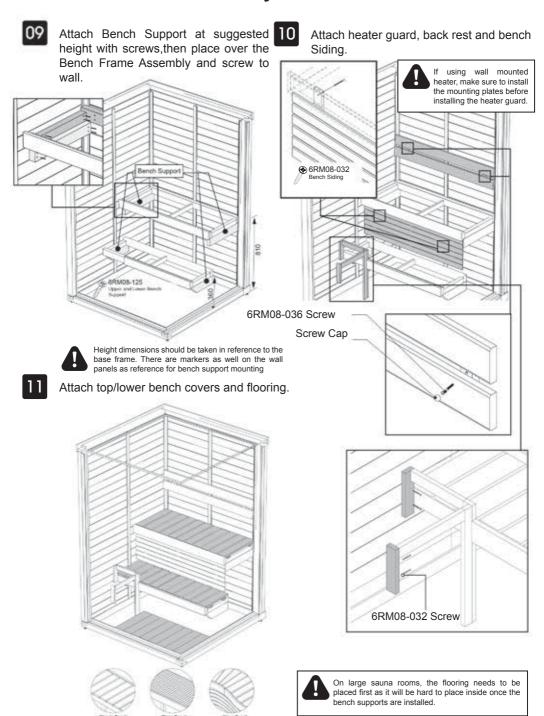

Interior Furnishes Assembly (Bench Support)

*For Big Sauna Rooms


Attach Bench Support at suggested height.

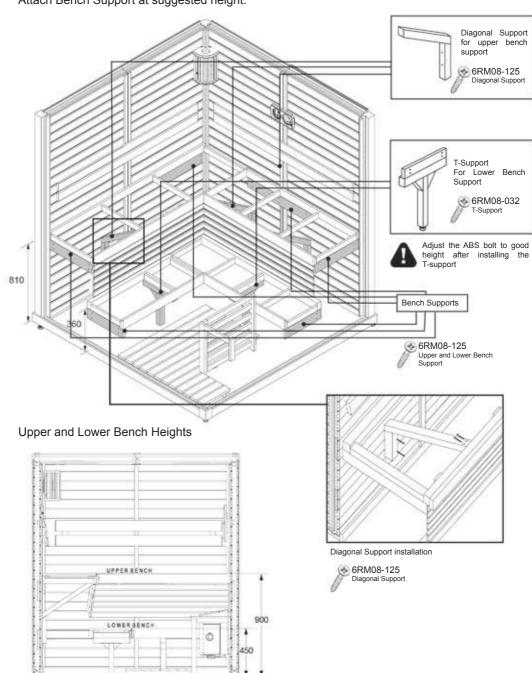

Interior Furnishes (Bench Covers)


*For Big Sauna Rooms

Attach Bench Covers Upper and Lower, then proceed with the heater guard. Lastly attached

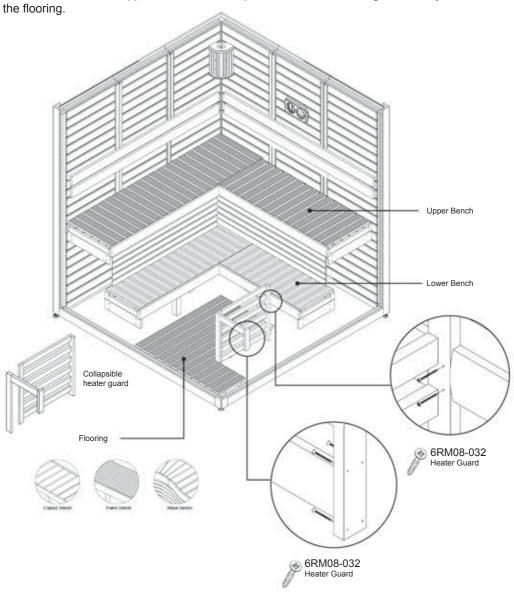

Electrical Layout

Electrical/Wiring Locations

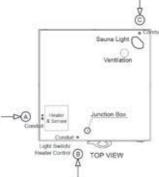

Electrical Conduit Locations:


- For heater and regulating sensor
- B. For sauna light switch and heater control
- For sauna light

Conduit to control unit

Wire Installation:

- Install junction / utility box /power controller into the ceiling roof as indicated.
- Insert wires into the electrical conduit designated for the sauna light switch (for NB heaters) or sauna control unit (for NS heaters).
- Insert wires into the electrical conduit designated for the heater (see technical detail). Extra wire jacket is provided for hooking up single wires to the heater. Disregard the extra wire jacket if you are using a rubber cable that is specified in the heater's manual.

Separate Control Installation (NS model heaters only)

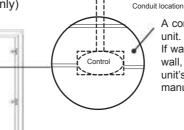

A conduit pipe is provided for the control

If wanting to flush the control unit into the wall, cut a hole according to your control unit's specifications. See heater control manual



Control unit must not be flushed to the wall, near or on the wall where the heater is installed. Use control unit interface holder if necessary

You can hide the power controller on the top of the sauna room.



Refer to heater control instruction manual for wiring connections



500



Note: Sensor installation is for Separate control heater models only.

A pre-drilled hole for the sensor is provided for separate control heaters. Sensor is placed directly above the heater. Refer the heater control instruction manual for the sensor installation.



Light Installation



The wall has a pre-drilled hole(s) for the lights. Insert wire(s) to the conduit(s) provided for the lights.

When ordering sauna room with NB heater, a dimmer switch is provided for the light(s).

When using NS heater, refer to the heater control instruction manual for the light installation.